REV TOUCH

EASICABLE
USER MANUAL

REV TOUCH

▪ Safety and Precautions

Before using the device, please read this instruction carefully in avoidance of any potential dangers or operations that may cause faults to the product.

Usage Environment

Do not place the product in dusty and humid environments in case of internal circuit fault.

Do not place the product near heating devices (such as electrical heater).

Children Safety

The product and accessories may contain some tiny components. Please place them beyond the reach of children in avoidance of swallowing danger.

Waterproof Function

The product is not waterproof,Please keep it dry.

Maintenance and Care

Maintenance of this product should be only performed by qualified technicians.

Do not insert any sharp objects into this product.

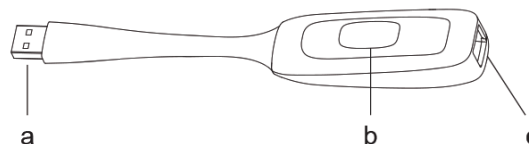Please avoid of intense hit or drop on the product .

Cable

This product is recommended to match standardized USB cable.

▪ Statements

The image shown in this manual is indicative only. If there is inconsistency between the image and the actual product, the actual product shall govern.
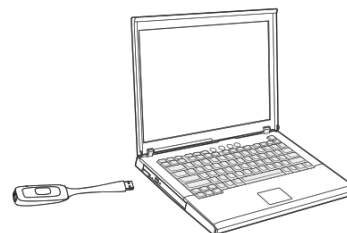
▪ Button and Interface

a   b   c

a. USB type A: connect with the PC

b. Button: click to present/stop to present the screen and sound

c. USB type B: connect with the standarlized USB cable
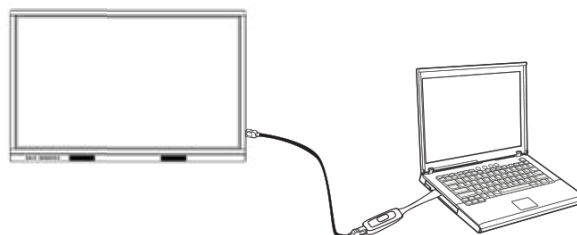
▪ Connection Instructions

This product needs to be used with the Interactive Flat Panel (IFP) .
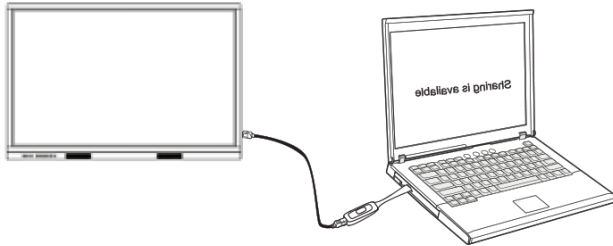
Step 1:

For the first-time use, connect the EasiCable to your PC and operate the driver manually (the driver will run automatically along subsequent connection).

Step 2:

Turn on the IFP, connect the EasiCable to the side USB port of IFP with the standard USB touch cable.

Step 3:

Click the button to share your screen and sound, when your PC pops out a prompt "Sharing is available".

▪ Instruction of the state indicator

Blinking indicates the device is on to way to be connected.

Lighting indicates the device has already been connected.

▪ Function Introduction

1. Supports to present the screen and sound of your PC to the IFP.

2. Supports to present the screen and sound of your PC to the IFP as an extended screen.

3. Supports to control your PC from the IFP side.

▪ Troubleshooting

When the device cannot be connected, please have a check as following:

1. Make sure the USB touch cable is connecting with the side USB port of IFP, instead of the front USB port or other module's USB ports.

2. Make sure the driver of EasiCable is running properly on your PC.

3. Try again to connect the Easicable.